

GLIDEROL TM390 REMOTE CODING INSTRUCTIONS

CODING REMOTES

GRD



1. Carefully remove cover from control box by lifting tab at bottom
2. Press the receiver button once (located on the receiver board top left corner of control box) A red light will illuminate
3. Press large button on the handset once and hold until red-light on receiver board turns off - This confirms that the handset is programmed

GTS



1. Ensuring the power is switched off remove or loosen the screw on the GTS cover using screw driver
2. Remove the GTS cover by pulling in the directions of arrows as shown in the picture
3. Switch ON the power supply and press the LEARN button on receiver once (located on receiver board as shown) • A red light will illuminate on the receiver board Note: The receiver picture may vary depending on the model of the receiver compare to the picture shown in the picture
4. Press and hold large button on the handset once until red-light on receiver board turns off - This confirms that the handset is programmed

If you require any assistance encoding the remotes, please contact us

easterngaragedoors

sales • service • repairs
remote control garage door openers

9812 3062

sales@easterngaragedoors.com.au • www.easterngaragedoors.com.au

GTS 2000 & OPTIMA



1. Carefully remove the light cover by pulling down on tab near front of unit
2. Press the LEARN button once • A red light will illuminate
3. Press the large button on the handset once and hold until red-light on receiver board turns off - This confirms that the handset is programmed

GRD+

The following instructions demonstrate how to program a new or additional Gliderol handset to suit your existing Glidermatic GRD+ garage door operator. Please note, if you are replacing a lost or stolen handset we recommend erasing all existing handset data from your operator prior to programming your new handset. Please refer to your Glidermatic GTS+ Owners Manual for further information on this process.


DELETE CODES

To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following the steps above.

Notes - Always use the large button for coding, even if the opener is GRD GTS

GTS 2000

GLIDEROL TM305C & TM390+ are not compatible, but do use the same method of coding...

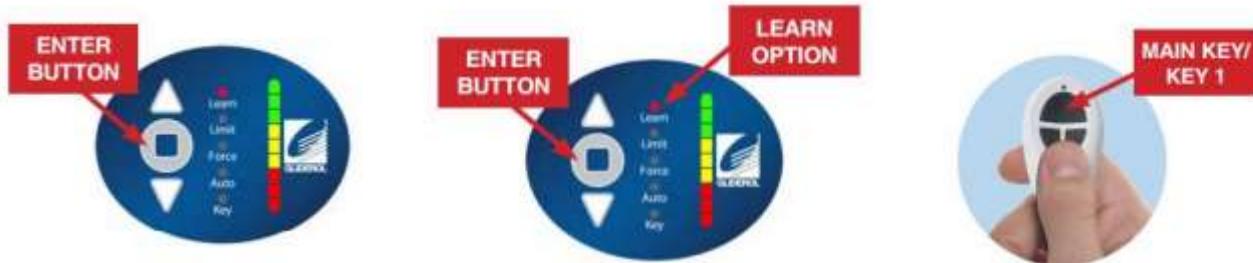

Step 1 Press and hold the 'Enter' button (shown above) for 2 seconds to access the operator menu. The unit will beep twice to confirm this has been selected. Note: Pressing the enter button for 5 seconds or more will erase all handset data from your operator - be careful not to press the enter key for longer than necessary. Step 2 Use the arrow (Up & Down) buttons to select the 'Learn' option and press 'Enter' to confirm selection. The unit will beep three times to confirm the unit is in Learn mode Step 3 Press the Main/Key 1 button on the handset. The unit will beep twice to confirm successful coding. Wait approx 3 seconds for the unit to exit setup mode. Your handset programming is now complete!

If you require any assistance encoding the remotes, please contact us

easterngaragedoors

sales • service • repairs
remote control garage door openers

9812 3062

sales@easterngaragedoors.com.au • www.easterngaragedoors.com.au