

GARAGE DOOR OPENER

40 MHz REMOTE CONTROL

Operates up to
2 Garage Doors
or Gates

- » Uses Merlin's proprietary fixed code technology.
- » Suits Merlin openers from 1994 to 2001 unless they are fitted with high security code-hopping receivers.
- » Suits gate openers fitted with Merlin M-500, M501 or M-502 receiver cards.


To fit the battery, remove the remote control from its holster, then press and slide the battery cover down. Match the + battery end to the mark on the case.

You must match the set of 12 code switches in this remote control to the code switches in your other remote controls, or to the code switches in your opener.

To expose the code switches on your remote control, remove the battery cover.

To expose the code switches on the door opener there will either be a small black plastic access panel or a side cover will need to be removed for access to the circuit board. If any screws must be removed from the opener to access the code switches, disconnect the opener from the mains power supply.

Match the code switches in the remote to the code switches in the opener.

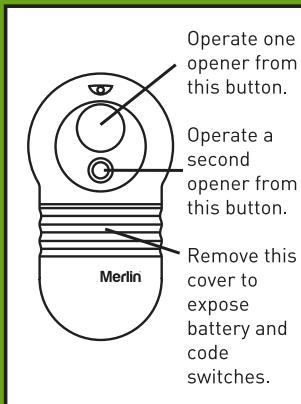

To operate your opener from the smaller button, match the code switches, but reverse code switch #1 in the remote control. To operate an opener from each button, set the same code in each opener, but then reverse code switch #1 in one opener.

Merlin®

Australia 1800 638 234 New Zealand 0800 653 667
gomerlin.com.au gomerlin.co.nz

Made in China

©2015 The Chamberlain Group, Inc



9 417593 008022

132A2838