


## M842S Remote

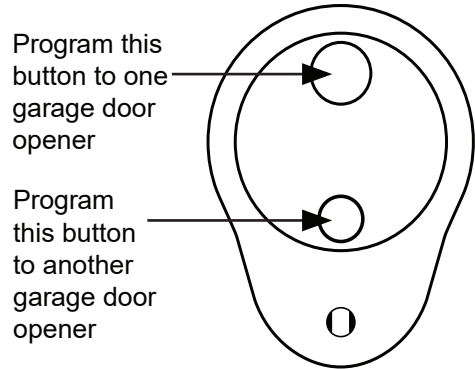

**Initially:** Locate the LEARN button on your particular opener and identify the button on the remote you wish to use. **Do not select a button already in use.**

### LEARNING INSTRUCTIONS:

1. Press the “Learn” button on your opener or receiver for 1-2 seconds, until the courtesy lamp begins to flash slowly.
2. Press the button on your remote you wish to program for one second.
3. Press the remote button again to confirm.
4. On the next press of that button the door should operate.

### COMPATIBLE WITH:

- Merlin M430R, 430R, M230T and 230T garage door openers from 2001 to 2007 (with Green Button Remote Control).
- Garage door openers fitted with Merlin’s code hopping receiver.
- Gate openers fitted with Merlin M-530 or M-532 code hopping receiver card.

**NOTE: A wall bracket clip is attached to the remote. The clip can be removed if used as a keyring remote.**

### ONE YEAR LIMITED WARRANTY

Chamberlain Australia Pty Limited / Chamberlain New Zealand (Chamberlain), the manufacturer of Merlin® automatic garage door openers, warrants to the original consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase. Chamberlain is committed to manufacturing and supplying high quality goods. As part of this commitment, we seek to provide reliable service and support for our goods and are pleased to provide you, the original purchaser, with this Chamberlain Limited Warranty.

The benefits given to you under this Chamberlain Limited Warranty are in addition to any rights and remedies that you may have under Australian or New Zealand consumer protection laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or New Zealand Consumer Guarantees Act 1993. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### ⚠ WARNING

WARNING! This product contains a button/coin cell battery.

- The battery is hazardous.
- Keep new and used batteries away from children.
- Do not ingest battery. Chemical burn hazard.
- If the coin cell battery is swallowed or placed inside any part of the body, it can cause severe or fatal injuries in 2 hours or less.
- If the battery compartment does not close securely, stop using the product and keep away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, call the 24-hour Poisons Information Centre on 13 11 26 in Australia, or the 24-hour National Poisons Centre on 0800 764 766 in New Zealand, or seek immediate medical attention.
- Dispose of used coin/button cell batteries immediately and safely. Flat batteries can still be dangerous.



### REPLACING THE BATTERY:

1. Use a screwdriver to gain access to the battery cover.
2. Insert a coin or similar object to open the battery cover.
3. Remove the old battery and dispose of properly.
4. Insert replacement battery positive side up. Replace batteries with only CR2025 coin cell batteries.
5. Replace the battery cover by using a coin or similar object.
6. Use a screwdriver to secure the battery cover.

